

CONVEYOR TOASTER

USER MANUAL

CONVEYOR TOASTER

MODEL



CT-1000

CT-1000-1

CONTENTS

A	GENERAL INFORMATION _____	Page	2
A1	PRODUCT DESCRIPTION _____	Page	4
A2	TECHNICAL INFORMATION _____	Page	4
A3	TRANSPORTATION _____	Page	6
A4	UNPACKING _____	Page	6
B	INSTALLATION _____	Page	6
C	SAFETY INSTRUCTIONS _____	Page	7
D	OPERATION _____	Page	8
E	CLEANING & MAINTENANCE _____	Page	9
F	TROUBLESHOOTING _____	Page	10
G	SPARE PART LIST- EXPLODING DRAWING _____	Page	11
H	ELECTRIC CIRCUIT SCHEMA _____	Page	13

CONVEYOR TOASTER

A GENERAL INFORMATION

Before installing the appliance, read operation and maintenance instructions carefully. Wrong installation and part changing may damage the product or may cause injury on people. These are not in our company's responsibility to damage the appliance intentionally, negligence, detriments because of disobeying instructions and regulations, wrong connections. Unauthorized intervention to appliance invalidates the warranty.

1. This instruction manual should be kept in a safe place for future reference.
2. **Installation should be made in accordance with ordinances and security rules of that country by a qualified service personnel.**
3. This appliance has to be used by trained person.
4. Please turn off the appliance immediately in the event of malfunction or failure. The appliance should be repaired only by authorized service personnel. Please demand original spare part.

WARNING:

- This device must be installed in accordance with applicable legislation and should only be used in a well-ventilated area. Please refer to the instructions before installing and using this device.
- Improper installation, adjustment, modification, service or maintenance can result in property damage, injury or death. Read the installation, use and maintenance instructions before installing or servicing this equipment.

1. Do not use electrical appliances or switches.
2. Do not light cigarettes or matches.
3. Leave doors and windows as they are
4. Go outside

SAFETY SYMBOLS



These symbols are intended to alert the user to the presence of important operating and maintenance instructions in the manual accompanying the appliance.

SERVICE AND MAINTENANCE / MAINTENANCE AND REPAIRS

Contact your local authorized service agent for service or required maintenance.

Contactez un technicien agréé pour toute réparation ou maintenance.

Please record the model number, serial number, voltage and purchase date in the area below and have it ready when you call to ensure a faster service.

Model No.	
Serial No.	
voltage	
Purchase Date	

Authorized Service Agent Listing Reference the listing provided with the unit Or for an updated listing go to

Website / Site web: www.empero.com.tr

E-mail / Courriel: empero@empero.com.tr

Service Help Desk	
Company	Galaxy Group Corp
Website / Site	www.galaxygroupcorp.com
telephone	(908) 315-3222
fax	-
Address:	899 Newark Tpke, Kearny NJ 07032 USA

IMPORTANT

Make sure that all paper protection and packaging have been removed before operating the device. This device should only be installed in the closed position.



WARNING :The device must be used by trained personnel.

CONVEYOR TOASTER

A1 PRODUCT DESCRIPTION

*The Professional Conveyor Toaster ,that provides high efficiency has been designed to be used in industrial kitchens.


Model	Depth (A) cm / inch	Width (B) cm / inch	Height(C) cm / inch	Approximate Weight	
				Unpacked Kg/Lb	Packed Kg/Lb
CT-1000	533 mm 21"	665 mm 26"	449 mm 17,7"	20 kg 44.09 lb	25 kg 55.11 lb
CT-1000-1	533 mm 21"	665 mm 26"	449 mm 17,7"	20 kg 44.09 lb	25 kg 55.11 lb

A2 TECHNICAL INFORMATION

Model	Voltage	KW Total	Amps (Maximum)
CT-1000	208 V	2.5 KW	13 A
CT-1000-1	110 V	1.5 KW	14 A

CONVEYOR TOASTER

CT-1000 - CT-1000-1

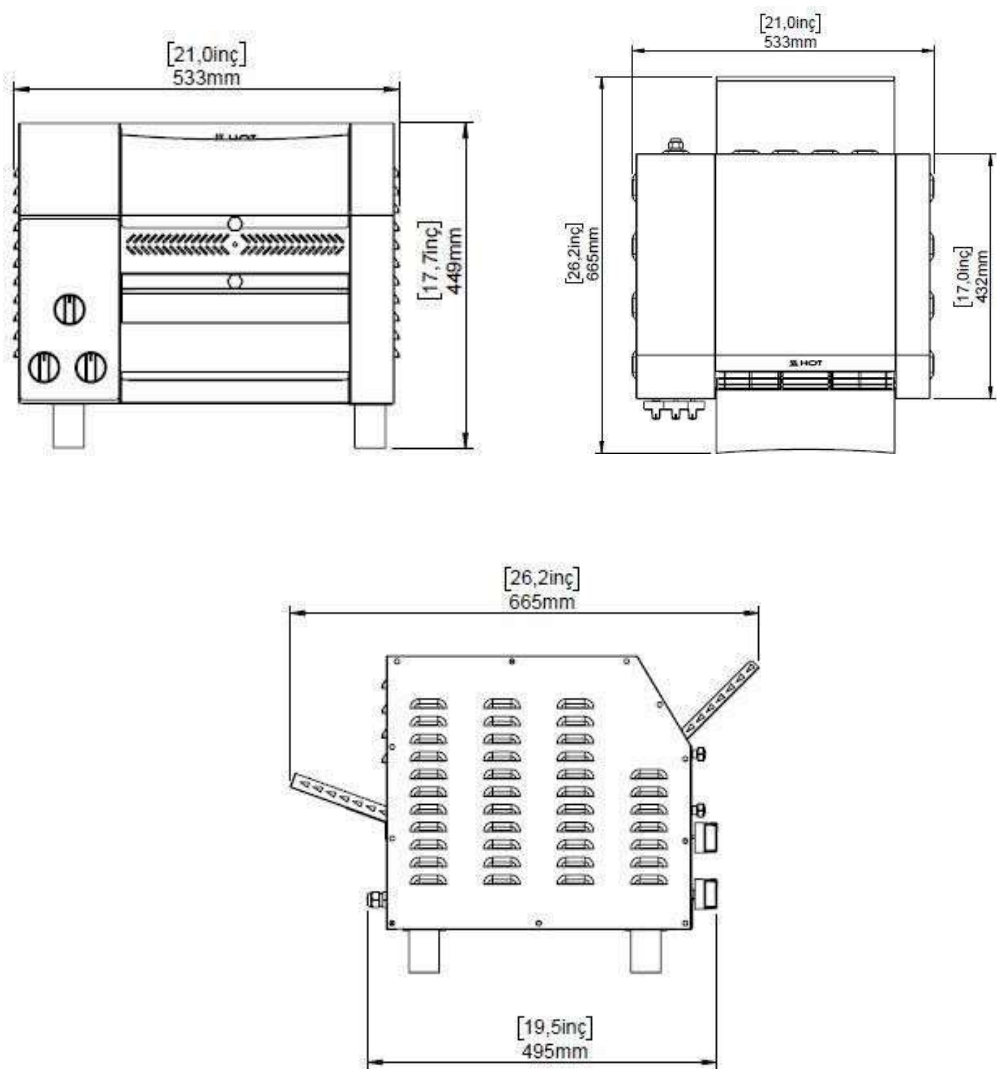

CONVEYOR TOASTER

A3 TRANSPORTATION

*This appliance can be moved by hand from area to area. Do not crash and drop the appliance while transporting.

A4 UNPACKING

*Please unpack the package according to the security codes and ordinances of current country and get rid from the pack. Parts which contacts with food are produced by stainless steel. All plastic parts are marked by material's symbol.

*Please check that all the parts of appliance had come completely and if they are damaged or not during the shipping.

B INSTALLATION

*Please place the product to straight and sturdy ground, please take necessary steps against possibility of overturn.

*Technician who will serve for installation and service for the appliance must be professional on this subject and must have installation and service licenses by the company.

*Connection to Electric Power Supply must be done by authorized person.

*Please be sure that the voltage connected to appliance must be equal with the voltage which is on appliance's label.

 This appliance must be connected to an earthed outlet in accordance with safety rules and standards.

*Appliance's earthing must be connected to earthing line on panel which is nearest to electric installation.

*Connection to the main fuse and leak current fuse must be done in accordance with the current regulations.

*NE PAS INSTALLER À UNE DISTANCE INFÉRIEURE À CELLE INDIQUÉE CI-DESSOUS D'UN MUR EN MATIÈRE COMBUSTIBLE: CÔTÉS 50 MM ARRIÈRE 200 MM or equivalent.

C SAFETY INSTRUCTIONS



*Do not use the appliance in insufficient lighted place.



*Do not touch the moving attachments while the appliance operates.



*Do not install the appliance in the presence of flammable or explosive materials.



*Do not operate the appliance when the machine is empty.



*Do not load so less or more than appliance's capacity.



*Do not attempt to use the appliance without suitable protective equipments.



*Because of any reason if there is a fire or flame flare where the appliance is used, turn off all gas valves and electric contactor switch quickly and use fire extinguisher. Never use water to extinguish the fire.



*All the damages because of not having earthing connection will not be on warranty.




*CAUTION: USE SUPPLY WIRES SUITABLE FOR 105°C or equivalent
ATTENTION: EMPLOYER DES FILS D'ALIMENTATION ADEQUATS POUR 105°C or equivalent

CONVEYOR TOASTER

D OPERATION

*Control Panel;

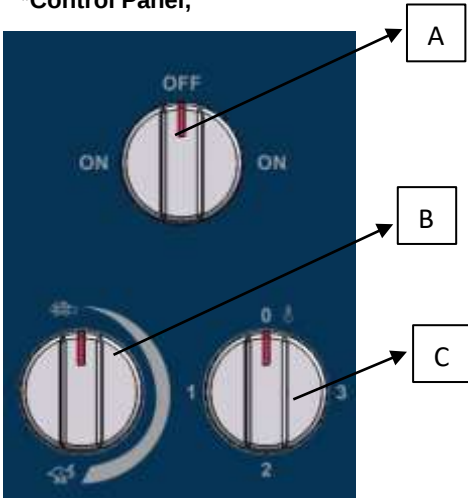

A : ON / OF

B : CONVIOR SPEED ADJUSTMENT KNOB

C : RESIDENCE CONTROL

CT-1000
CT-1000-1

*Operating;

- Plug in the device.
- (A) Turn the ON/OFF switch to the ON position for operation.
- (B) You can adjust the speed of the CONVIOR with the speed control knob.
- (C) When the resistance control knob is set to position 1. the 2 resistances operate top and bottom.
When set to position 2. 4 resistances, 2 lower and 2 upper, operate.
When set to position 3. 5 residences work, i.e. all of them start working.
- After the toasting process is finished, switch to the (0) position. Finish by switching to the (OFF) position and unplug the appliance from the socket.

E CLEANING & MAINTENANCE

➤ **CLEANING AND MAINTENANCE AFTER EVERY USE**

- Always turn off the appliance and disconnect from the power supply before cleaning.
- Clean the outer surface of the appliance with a wet cloth and chrome shiner.
- Do not use abrasive cleaning chemicals as these can leave harmful residues.
- Do not clean the appliance by spraying water directly, otherwise electric motor may get damaged.

➤ **PERIODIC CLEANING AND MAINTENANCE**

- Maintenance should be done by qualified person.
- Get the periodic maintenance of the appliance once in every 15 days.
- Clean the palet and grill according to frequency of use and do not allow the residues to be accumulated.

CONVEYOR TOASTER

F TROUBLESHOOTING

THE APPLIANCE DOESN'T OPERATE	1. Check if the appliance is plugged in. 2. Check the electrical connections and voltage. 3. Check the fuse if it is on or not.
--------------------------------------	---

THE APPLIANCE DOESN'T COOK WELL	1. Check the switch temperature is set to desired temperature or not. 2. Check if the suitable positions are chosen or not for moist and dry slices of breads. 3. Before frying moist slices of breads, place them on the grill.
--	--


THE APPLIANCE STOPPED	1. The appliance can stop due to low voltage. In this situation check the voltage.
------------------------------	--

- If bread frying is not done at suitable quality
- If any function of security doesn't work
 - Do not use the appliance.

***If these problems are still going on, contact with our authorized services.**

CONVEYOR TOASTER

G SPARE PART LIST-EXPLODING DRAWING

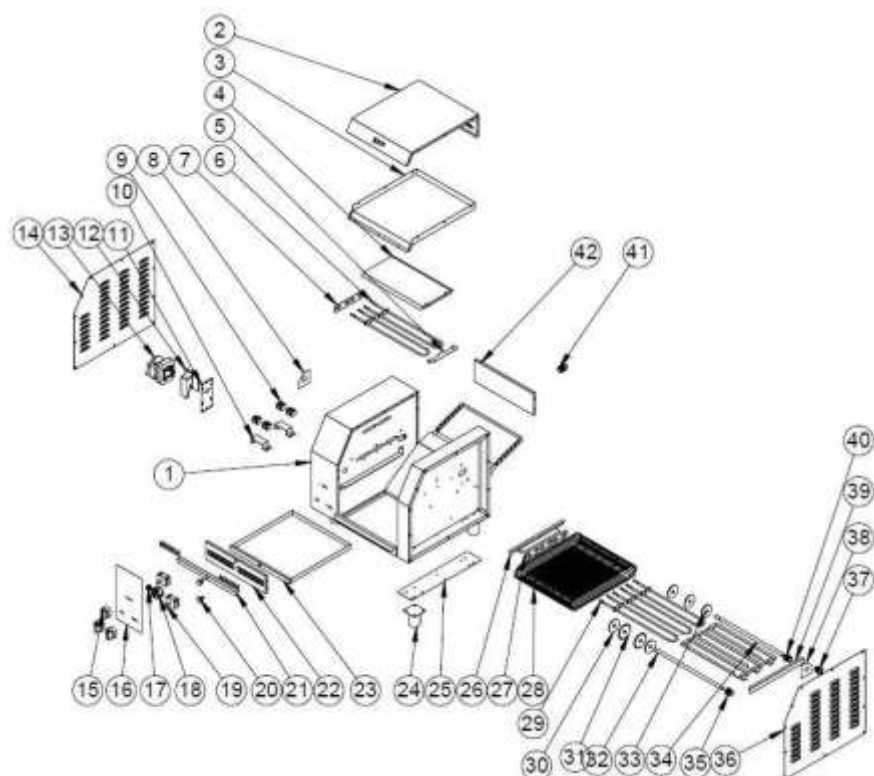

CONVEYOR TOASTER

G SPARE PART LIST-EXPLODING DRAWING


PRODUCT CODE: CT-1000		
NO	PRODUCT NAME	P.CODE
1	CHASSIS	-
2	MEK010-USA MID TOP SC	YSC-ERK.MEK-LZ-0001
3	MEK010-USA TOP INSULATION SHEET	YSC-KNX.ERK-LZ-0006
4	MEK010-USA RESISTANCE TOP SHEET	YSC-ERK.MEK-LZ-0018
5	MEK010-USA RESISTANCE TOP FIXING SHEET	YSC-ERK.MEK-LZ-0019
6	2.5 KW 208V RESISTANCE MEK010- USA	M.ELK-RZS-BRU-MEK-005
7	MEK010-USA RESILIENCE FLANGE SC	YSC-ERK.MEK-LZ-0033
8	MEK010-USA SHAFT CLAMPING SPACER	YSC-ERK.MEK-LZ-0023
9	ONKA 2 NO 2 PORCELAIN TERMINAL BLOCK	M.ELK-KLM-PRS-003
10	MEK010-USA TERMINAL PLATE 1	YSC-ERK.MEK-LZ-0008
11	EMP.MEK.010-USA MOTOR CONNECTION SC	YSC-ERK.MEK-LZ-0008
12	EMP.MEK.010-USA MOTOR SC	YSC-ERK.MEK-LZ-0021
13	2516-B0206I-1511 240V 20A 60Hz (RMS7) GLEASON AVERY MOTOR	ERK.M.ELK-MTR-RMM-008
14	MEK010-USA RIGHT TOOTH SC	YSC-ERK.MEK-PN-0001
15	NEW SHINY BUTTON Ø43MM	
16	EMP.MEK010-USA LEKSAN NEW LABEL	M.AKS-ETK-LKS-031
17	FAUCET BUTTON SOCKET 6 MM ELK Ü.	M.AKS-DGM-SKT-002
18	WX112(050) 220Ω+-5% POTENTIOMETER	M.ELK-PMT-001
19	EGO SWITCH 0-1 SINGLE PHASE 49.22015.000 EGO	M.ELK-SLT-EGO-001
20	M6 NO1 SMALL BAKELITE HANDLE	M.AKS-KLP-BKL-010
21	MEK010-USA CENTER FRONT PAN	YSC-ERK.MEK-LZ-0026
22	MEK010-USA CENTER FRONT SC	YSC-ERK.MEK-LZ-0013
23	MEK010-USA TOP DRAWER	YSC-ERK.MEK-LZ-0014
24	CONICAL ROTI FOOT 6 CM	M.AKS-AYK-NKL-001
25	MEK010-USA BOTTOM DRAWER RIGHT SLIDE SC	YSC-ERK.MEK-LZ-0011
26	MEK010-USA RESISTANCE LOWER SUPPORT SC	YSC-ERK.MEK-LZ-0020

CONVEYOR TOASTER

27	MEK010-USA RESISTANCE LARGE FLANGE SC	YSC-ERK.MEK-LZ-0032
28	MEK010-USA CONVEYOR WIRE	M.AKS-SPT-TEL-001
29	2.5 KW 208V RESISTANCE MEK010- USA	M.ELK-RZS-BRU-MEK-005
30	MEK010-USA WIRE SHAFT CIRCLE SC	YSC-ERK.MEK-LZ-0030
31	MEK010-USA WIRE SHAFT GEAR SC	YSC-ERK.MEK-LZ-0029
32	MEK010-USA FRONT WIRE SHAFT	YTL-ERK.MEK-KS-0003
33	MEK010-USA WIRE SHAFT CIRCLE SC	YSC-ERK.MEK-LZ-0030
34	MEK010-USA WIRE TENSION SHAFT	YTL-ERK.MEK-KS-0004
35	MEK010-USA SHAFT TIGHTENING BOLT	YTL-ERK.MEK-KS-0002
36	MEK010-USA RIGHT TOOTH SC	YSC-ERK.MEK-PN-0001
37	MEK010-USA SHAFT TIGHTENING BOLT	YTL-ERK.MEK-KS-0002
38	MEK010-USA SHAFT CLAMPING SPACER	YSC-ERK.MEK-LZ-0023
39	MEK010-USA RESISTANCE LOWER SUPPORT SC	YSC-ERK.MEK-LZ-0020
40	MEK010-USA SHAFT TIGHTENING BOLT	YTL-ERK.MEK-KS-0002
41	PG-11 GRAY CABLE GLAND WITH NUT	M.ELK-RKR-PLS-003
42	MEK010-USA REAR TOP INSULATION SC	YSC-ERK.MEK-LZ-0007

CONVEYOR TOASTER

G SPARE PART LIST-EXPLODING DRAWING

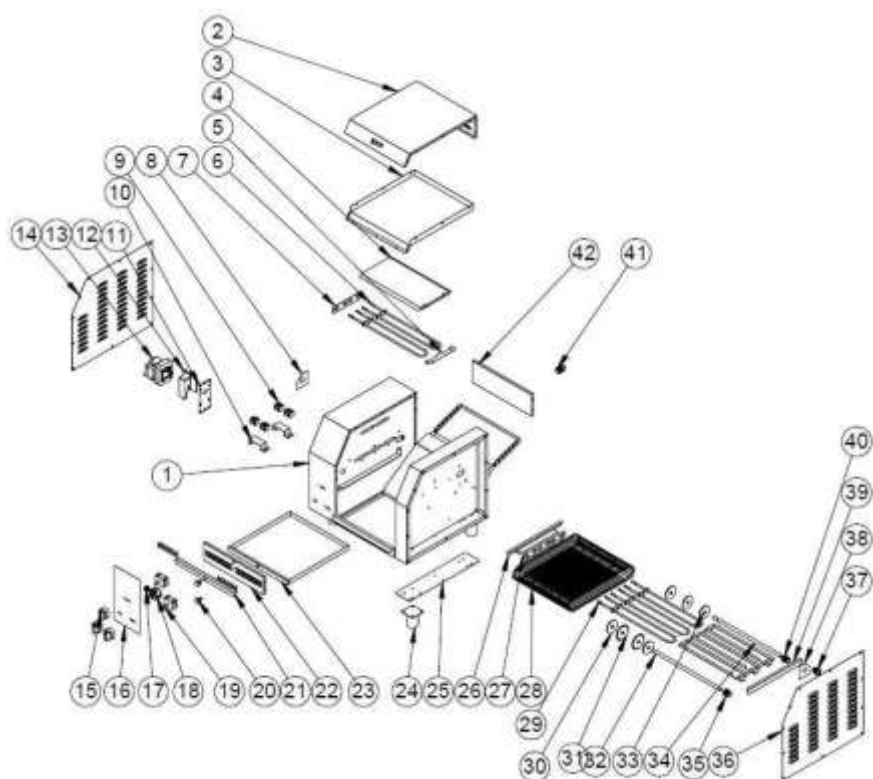


G SPARE PART LIST-EXPLODING DRAWING

PRODUCT CODE: CT-1000-1		
NO	PRODUCT NAME	P.CODE
1	CHASSIS	-
2	MEK010-USA MID TOP SC	YSC-ERK.MEK-LZ-0001
3	MEK010-USA TOP INSULATION SHEET	YSC-KNX.ERK-LZ-0006
4	MEK010-USA RESISTANCE TOP SHEET	YSC-ERK.MEK-LZ-0018
5	MEK010-USA RESISTANCE TOP FIXING SHEET	YSC-ERK.MEK-LZ-0019
6	1.5 KW 110V RESISTANCE MEK010- USA	M.ELK-RZS-BRU-MEK-005
7	MEK010-USA RESILIENCE FLANGE SC	YSC-ERK.MEK-LZ-0033
8	MEK010-USA SHAFT CLAMPING SPACER	YSC-ERK.MEK-LZ-0023
9	ONKA 2 NO 2 PORCELAIN TERMINAL BLOCK	M.ELK-KLM-PRS-003
10	MEK010-USA TERMINAL PLATE 1	YSC-ERK.MEK-LZ-0008
11	EMP.MEK.010-USA MOTOR CONNECTION SC	YSC-ERK.MEK-LZ-0008
12	EMP.MEK.010-USA MOTOR SC	YSC-ERK.MEK-LZ-0021
13	2516-B0206I-1511 240V 20A 60Hz (RMS7) GLEASON AVERY MOTOR	ERK.M.ELK-MTR-RMM-008
14	MEK010-USA RIGHT TOOTH SC	YSC-ERK.MEK-PN-0001
15	NEW SHINY BUTTON Ø43MM	
16	EMP.MEK010-USA LEKSAN NEW LABEL	M.AKS-ETK-LKS-031
17	FAUCET BUTTON SOCKET 6 MM ELK U.	M.AKS-DGM-SKT-002
18	WX112(050) 220Ω+5% POTENTIOMETER	M.ELK-PMT-001
19	EGO SWITCH 0-1 SINGLE PHASE 49.22015.000 EGO	M.ELK-SLT-EGO-001
20	M6 NO1 SMALL BAKELITE HANDLE	M.AKS-KLP-BKL-010
21	MEK010-USA CENTER FRONT PAN	YSC-ERK.MEK-LZ-0026
22	MEK010-USA CENTER FRONT SC	YSC-ERK.MEK-LZ-0013
23	MEK010-USA TOP DRAWER	YSC-ERK.MEK-LZ-0014
24	CONICAL ROTI FOOT 6 CM	M.AKS-AYK-NKL-001
25	MEK010-USA BOTTOM DRAWER RIGHT SLIDE SC	YSC-ERK.MEK-LZ-0011
26	MEK010-USA RESISTANCE LOWER SUPPORT SC	YSC-ERK.MEK-LZ-0020

CONVEYOR TOASTER

27	MEK010-USA RESISTANCE LARGE FLANGE SC	YSC-ERK.MEK-LZ-0032
28	MEK010-USA CONVEYOR WIRE	M.AKS-SPT-TEL-001
29	2.5 KW 208V RESISTANCE MEK010- USA	M.ELK-RZS-BRU-MEK-005
30	MEK010-USA WIRE SHAFT CIRCLE SC	YSC-ERK.MEK-LZ-0030
31	MEK010-USA WIRE SHAFT GEAR SC	YSC-ERK.MEK-LZ-0029
32	MEK010-USA FRONT WIRE SHAFT	YTL-ERK.MEK-KS-0003
33	MEK010-USA WIRE SHAFT CIRCLE SC	YSC-ERK.MEK-LZ-0030
34	MEK010-USA WIRE TENSION SHAFT	YTL-ERK.MEK-KS-0004
35	MEK010-USA SHAFT TIGHTENING BOLT	YTL-ERK.MEK-KS-0002
36	MEK010-USA RIGHT TOOTH SC	YSC-ERK.MEK-PN-0001
37	MEK010-USA SHAFT TIGHTENING BOLT	YTL-ERK.MEK-KS-0002
38	MEK010-USA SHAFT CLAMPING SPACER	YSC-ERK.MEK-LZ-0023
39	MEK010-USA RESISTANCE LOWER SUPPORT SC	YSC-ERK.MEK-LZ-0020
40	MEK010-USA SHAFT TIGHTENING BOLT	YTL-ERK.MEK-KS-0002
41	PG-11 GRAY CABLE GLAND WITH NUT	M.ELK-RKR-PLS-003
42	MEK010-USA REAR TOP INSULATION SC	YSC-ERK.MEK-LZ-0007

H ELECTRIC CIRCUIT SCHEMA

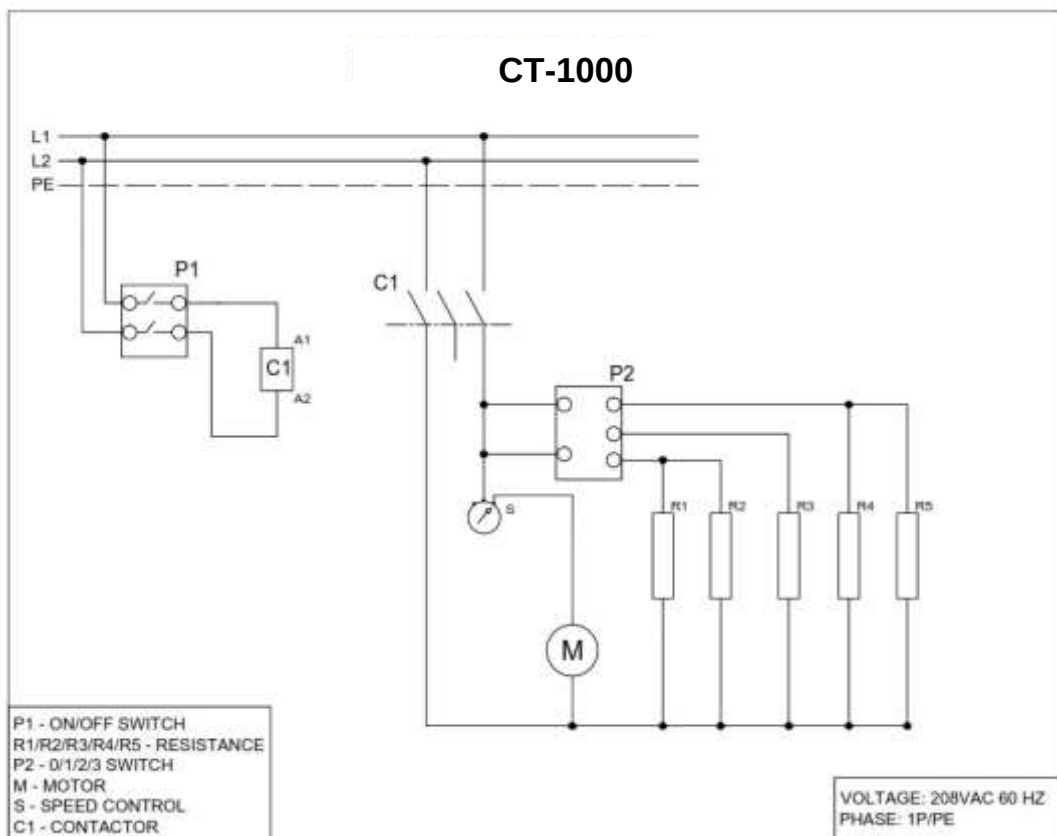

CONVEYOR TOASTER

H ELECTRIC CIRCUIT SCHEMA

