Cleaning the HhC 1618, 2020, and 2620 Ovens

Daily Cleaning Instructions–

Follow the steps below daily to help maintain your oven. DO NOT clean the oven using a water jet.

Supplies and Equipment


TurboChef-approved oven cleaner (ventless models **must** be cleaned with TurboChef Oven Cleaner only), nylon scrub pad, cleaning towels, disposable gloves.

Legend


= Wash, rinse, and sanitize.

= Completely dry and wipe with a clean towel.


1.

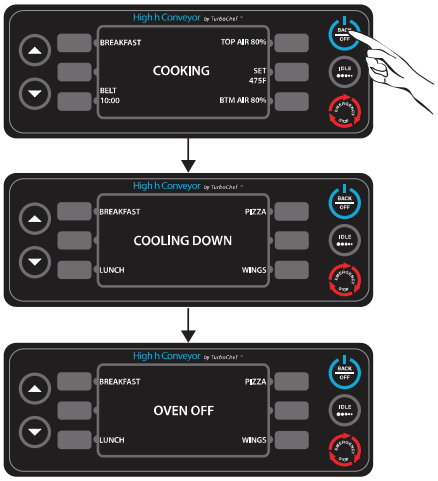


2.

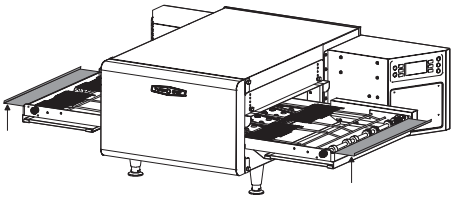


3.

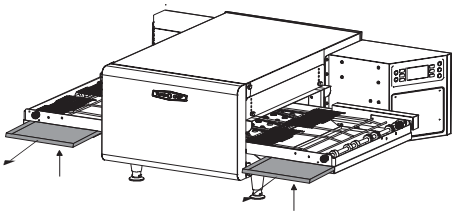


4.

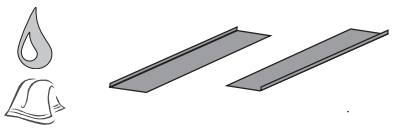


5.

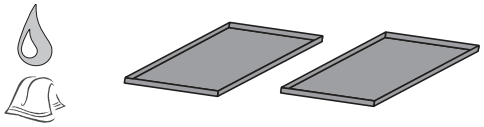


6.

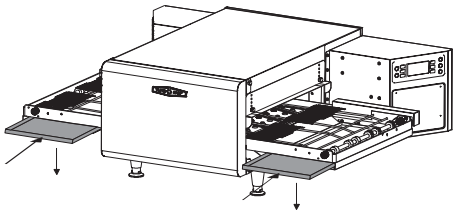

7.

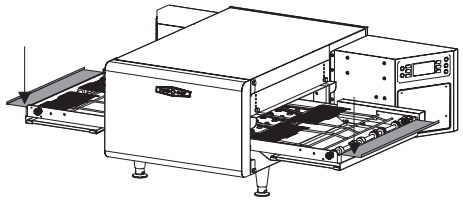

8.

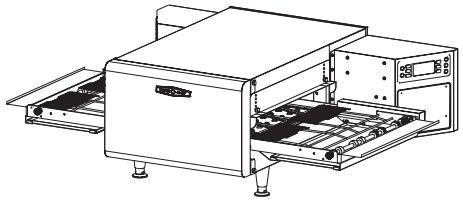

Customer Service: 800.90TURBO (within U.S.)
Customer Service: +1 214-379-6000 (outside U.S.)
©2008-2013 TurboChef Technologies, Inc.

TURBOCHEF™

Part Number: DOC-1082 / Rev E / August 2013
Country Code: NA/EU

Weekly Cleaning Instructions

Follow the steps below weekly to help maintain your oven. DO NOT clean the oven using a water jet.

Supplies and Equipment

TurboChef-approved oven cleaner (ventless models **must** be cleaned with TurboChef Oven Cleaner only), nylon scrub pad, cleaning towels, disposable gloves

⚠ Use only TurboChef-approved cleaner, part number 103180.

⚠ WARNING: DO NOT attempt to clean the oven until it has cooled (screen reads "Oven Off").

⚠ WARNING: DO NOT use a water jet when cleaning the oven.


⚠ WARNING: Always disconnect power before cleaning or servicing oven.

Step 1: Turn the Oven Off


Press the Back/Off key until the oven begins cooling down. Allow the oven to completely cool (screen will say "Oven Off"), then unplug.

Step 2: Remove Outer Oven Components


A.

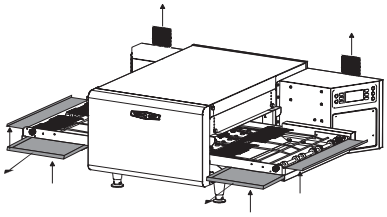

B.

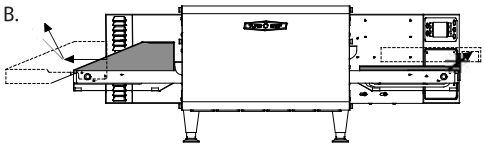


C.

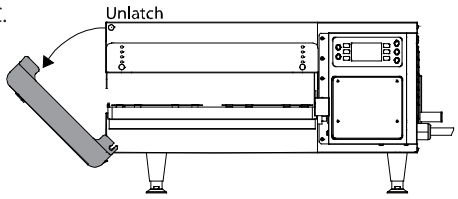


NOTE: Certain oven models are equipped with a side-swing front hatch. To remove the side-swing front hatch, unlatch and fully open it, then lift the front hatch upwards and off its hinges.

Step 3: Remove Inner Oven Components


A.

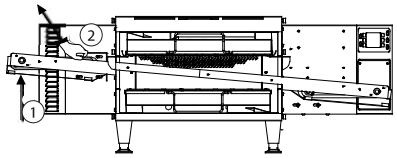

B.

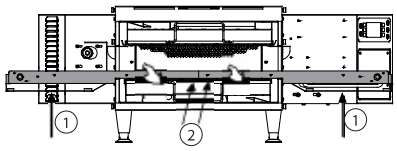


C.

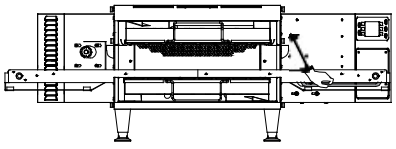


Step 3: Remove Inner Oven Components, Continued

D.

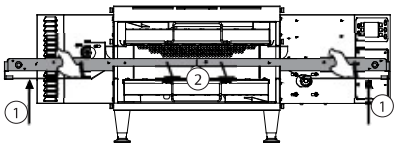


E.

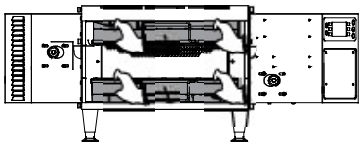

Step 4: Clean Oven Components


Wash, rinse, sanitize, and dry the following components, and wipe out the oven cavity.

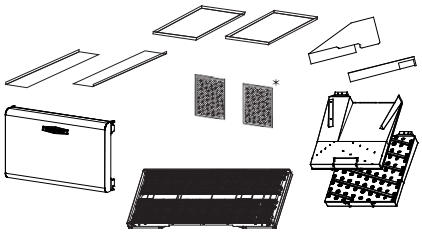


* Replace filters if damaged or torn.

Step 5: Replace Oven Components


A.

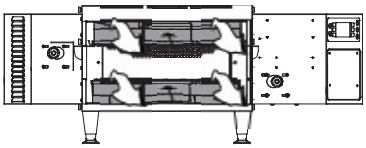


B.

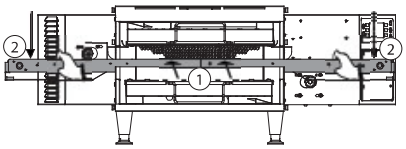

C.

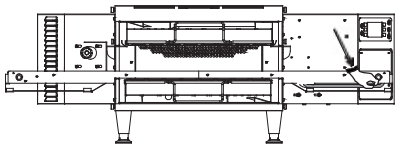


D.

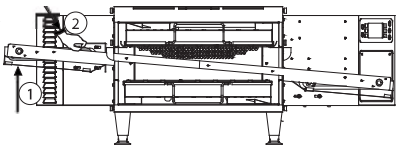


Step 5: Replace Oven Components, Continued


E.

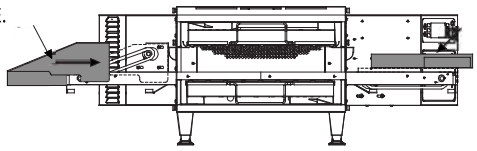


F.

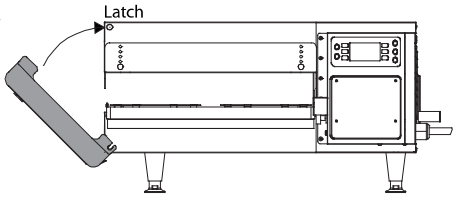


G.

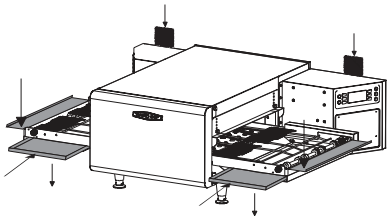


Step 6: Verify Chain Tension

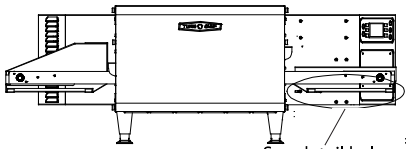

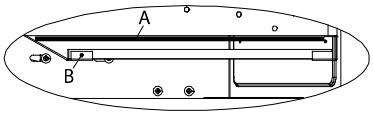

Acceptable - Chain (A) is tight and easily clears crumb tray holder (B)

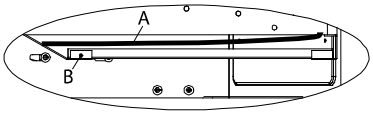

Call service to have link removed - Chain (A) is loose and risks contact with crumb tray holder (B)

Step 7: Ready the Oven for Use

Wipe the oven exterior with a clean, damp towel. Once cleaning is finished, plug the oven in.